


Storage Tank Float Trouble Shooting

Storage Tank Float Pin connections:

- Pin 4 - Bottom Float
- Pin 3 - Mid Float
- Pin 2 - Upper Float
- Pin 1 - Common Line

4
2

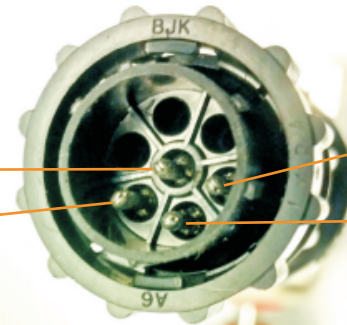

3
1

Top Float

Mid Float

Bottom Float

Unplug distiller before performing any work.

- All Floats In Down Position: 1, 2, & 3 Pins Conductive With Each Other Except 4.
- Bottom Float Up Only: All Pins Conductive With Each Other
- Bottom & Mid Floats Up: All Pins Conductive With Each Other Except 3.
- All Floats Up: 1 & 4 Conductive Only.

Distiller Receptacle

- Pin 4 - Bottom Float 120V
- Pin 3 - Mid Float 120V
- Pin 2 - Upper Float
- Pin 1 - Common Line

Questions, please contact us via website or phone (801) 281-4911.