


Precision Water Distillers Owners' Guide

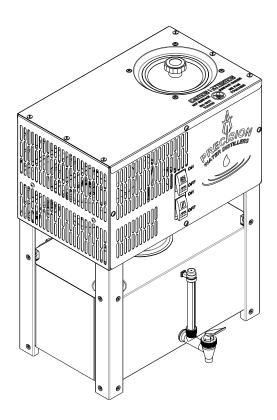

MODEL: PWS RIVER
Part # 500058
Series 0001

Manufactured By:

Precision Design & Manufacturing Inc. 9020 - 100 Street, Westlock, AB, Canada T7P 2L4

http://www.precisionwatersystems.ca e-mail: info@precisioncanada.com

Phone: (780) 349 4933

Please read this Owners' Guide completely before installing or operating your Precision Water Distiller.

Specifications are subject to change without notice.

Part No. 097509 Series: 00201 Printed in Canada Copyright © 2022



Table of Contents

TABLE OF CONTENTS	3
INTRODUCTION	4
RECORDS	5
PRECISION WATER DISTILLER WARRANTY	6
IMPORTANT SAFETY PRECAUTIONS	7
ADDITIONAL SAFETY RECOMMENDATIONS	7
PRECISION WATER DISTILLER OWNERS' SUMMARY	8
WATER DISTILLER FEATURES	0
10 FACTORS THAT WILL AFFECT YOUR WATER DISTILLER PRODUCTION	11
UNDERSTANDING HOW PURE WATER IS PRODUCED	13
FINDING A GOOD INSTALLATION LOCATION	14
UNPACKING YOUR WATER DISTILLER	15
WATER DISTILLER PARTS BAG COMPONENTS	17
WATER DISTILLER INSTALLATION TOOLS	17
STORAGE TANK ASSEMBLY	17
MANUAL DRAIN VALVE TUBE INSTALLATION	20
FEED WATER LINE CONNECTION & PRE-FILTER INSTALLATION	21
BOILING TANK LID INSTALLATION	25
STORAGE TANK LID REMOVAL AND INSTALLATION	25
OPERATION	26
CONTROLS - POWER, FAN, WATER AND OVERHEAT RESET	27
FUSE	28
STORAGE TANK DRAIN VALVE	28
BEFORE INITIAL WATER DISTILLER OPERATION	29
NORMAL OPERATION	30
MAINTANCE AND CLEANING	31
REGUALER INSPECTION AND CLEANING OF BOILING TANK	31
CLEANING THE BOILING TANK USING CLEANER DESCALER	32
CLEANING THE BOILING TANK USING REGULAR WHITE VINEGAR	
REPLACING CHARCOAL IN CHARCOAL FILTER CANISTER	
STERILIZATION	
LIQUID STERILIZATION OF STORAGE TANK AND OPTIONAL PUMP WATER LINE SYSTEM	
STEAM STERILIZATION OF WATER DISTILLER HEAD	
STEAM STERILIZATION OF WATER DISTILLER HEAD, FILTER CANISTER AND STORAGE TANK	
MAINTENANCE SCHEDULE TABLE	
OWNER MAINTENANCE RECORD TABLE	
TROUBLESHOOTING	
SERVICE CENTER	
OPTIONAL ACCESSORIES	
PWS APK-21 PUMP KIT	
PWS APK-21 PUMP KIT INSTALLATION	
TYPICAL HOUSEHOLD PLAN FOR WATER DISTILLER	
PWS AED-1 AUTOMATIC ELECTRIC DRAIN KIT INSTALLATION	
ADDITIONAL SUPPLIES	
SPECIFICATIONS AND TECHNICAL INFORMATION	
WIRING LIST AND SCHEMATIC	
INDEX	62

INTRODUCTION

Congratulations on the purchase of the most advanced water distiller in the industry! When installed and maintained properly, your Precision Water Distiller will provide years of safe, trouble free service. It is important to observe and follow the safety and maintenance instructions carefully. If you have any questions or concerns regarding installation or operation of your water distiller, please contact your dealer.

All 120 VAC Precision Water Distillers are certified to cCSAus Classes 2831-53 and 2831-83 under the Canadian and American Electrical Code.

All water distillers are factory tested with a high voltage 'Dielectric Strength Test' and ground fault test prior to shipping.

Precision Water Distillers have been tested by EnviroTest Laboratories which found the water distillation units to be very effective water treatment systems capable of removing both harmful pathogens and toxic chemicals from water. In their study all pathogens were eliminated and none were found in the distilled water. The water distillation system also effectively removed all of the soluble inorganic chemicals tested. Removal efficiencies of 99% or greater were achieved for almost every chemical tested.


All Precision Water Distillers are operated and tested at the factory and have produced distilled water to make sure all components are functioning properly. All water distillers are wiped clean before shipping, but there may be a water ring inside the boiling tank. There may also be an off-colour line at the seams of the storage and boiler tank. This is caused by the TIG welding process used during manufacturing. This is normal and is not a sign of a problem. Follow all the **Before Initial Water Distiller Operation** procedures and you will have pure water in no time.

Your Precision Water Distiller must be installed according to any Local, State or Provincial Regulations.

Records

Please record all of the important information below to assist you and the service center in case there is any service work required in the future. All of the information is required to properly identify your water distiller and will make servicing much easier. The information is located on the serial plate on the side of the water distiller head. The **Serial Plate Location Diagram** below shows a sample serial plate.

Serial Plate Location Diagram

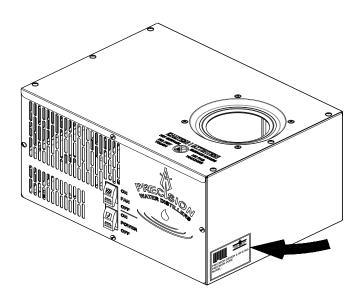

Model: PWS R	IVER
Series:	eg: 0001
Serial Number:	eg: 230100
Date of Purc	hase:
Dealer Purch	ased From:
Optional Pun	np Serial No:
	Series:
Optional Dra	in Serial No:
	Series:

Precision Water Distiller Warranty

- The warranty for your Precision Water Distiller covers defects in materials for two (2) years on all parts to the original purchaser.
- Stainless Steel parts are covered by a 15 year, pro-rated warranty. This covers all stainless steel parts such as the boiling and storage tank. With this warranty it is the responsibility of the distiller owner to properly maintain the distiller. If there is any misuse or abuse the warranty will be void.
- Precision Water Systems does not warrant any transportation charges incurred to complete the repair. The distiller owner is responsible for all shipping charges to and from the service center.
- Warranty is void if damage is found to have been caused by consumer damage, misused, acts of God, unauthorized alteration, repair or vandalism.

Important Safety Precautions

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.

- 2. Do not touch hot surfaces. Use handles or knobs.
- **3.** If the Supply Cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to avoid hazard.
- **4.** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **5.** To protect against electrical shock do not immerse cords or plugs in water or other liquid.
- **6.** Children should be supervised to ensure that they do not play with the appliance.
- 7. Do not allow children to operate this appliance.
- **8.** Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- **9.** Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest service facility for examination, repair or adjustment.
- **10.** The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- **11.**Do not use outdoors.
- 12. Do not let cord hang over edge of table counter or touch hot surfaces.
- **13.** Do not place on, in or near a hot gas or electric burner, or a heated oven.
- **14.** Extreme caution must be used when moving an appliance containing hot water.
- **15.** Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any controls to "off", then remove plug from wall outlet.
- **16.** The maximum inlet water pressure is 827370 pascals or 120psi.
- 17. This appliance is intended for household use.
- 18. Save these instructions.

Additional Safety Recommendations

- **1.** Always unplug appliance before servicing.
- **2. Do not** use extension cords with appliance.
- **3.** Ensure there is adequate air space around the appliance to allow the heat from the appliance to be removed and supply adequate fresh air for cooling.
- 4. Do not place close to combustible material.
- 5. Unplug when not in use for extended periods of time.


Precision Water Distiller Owners' Summary

The following is a summary of the information contained in this Owners' Guide and required to install and operate your Water Distiller


- 1) Find a good location for installing your Water Distiller See Finding a Good Installation Location.
- 2) Unpack the water distiller and parts See Unpacking Your Water Distiller.
- 3) Assemble the Water Distiller See
 Storage Tank Assembly
 Manual Drain Valve Tube Installation
 Feed Water Line Connection
 Boiling Tank Lid Installation
 Water Distiller Wall Stabilizer
- **4)** Install all purchased Options See **Optional Accessories** for installation instructions.
- 5) Steam sterilize boiling tank and storage tank See Steam Sterilization in the Maintenance and Cleaning section.
- 6) Load Charcoal Filter Canister See Replacing Charcoal in Charcoal Filter Canister in the Maintenance and Cleaning section.
- 7) Follow procedure in Normal Operation section.
- 8) Enjoy pure distilled water!

Water Distiller Features

Water Distiller Front View

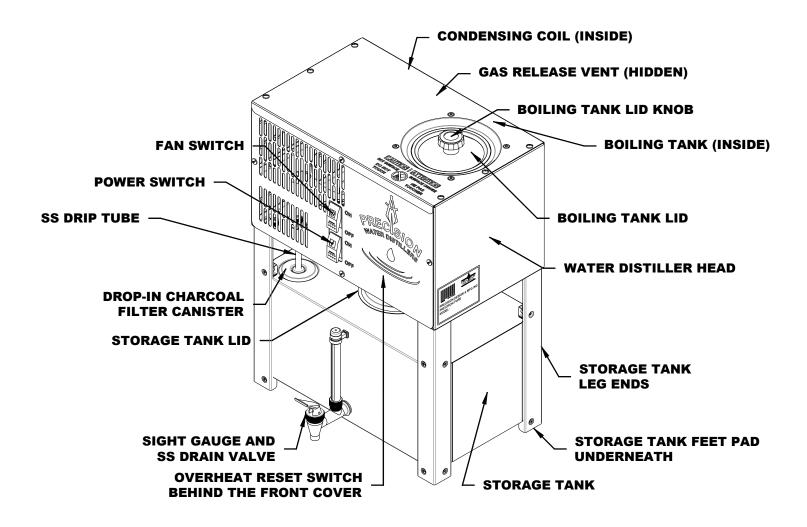

Water Distiller Rear View

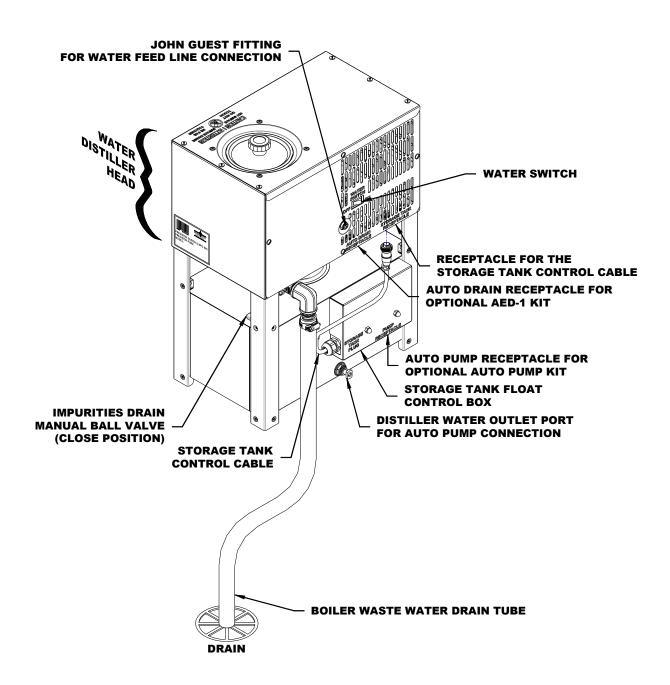

10 Factors That Will Affect Your Water Distiller Production

1. Water Volume Measurement

- a) How are you measuring your water? The most accurate is by weight. 1 litre of pure water = 1 kg = 1000 g = 2.2046 lbs
- b) Water distillers are rated in US gallons, NOT Imperial Gallons. 1 US Gallon = 3.785 litres = 3.785 kg = 8.344 lbs = 0.833 Imp. Gallons
- c) Most distilled water holding tanks do not completely drain from the tap. Ensure this volume of water is included in your calculation by completely draining the tank or starting your production check with this volume pre-filled.

2. Line Voltage

The line voltage at the outlet where the distiller is connected should be checked with a voltmeter. Line voltage is often much less than expected, especially in rural areas. Line voltage will also usually drop off dramatically when the daily commercial load hits the grid from approximately 8 am to 5 pm (often when the distiller owner is not home and unable to check the line voltage). Line voltage lower than the distiller rated voltage (on the serial plate) will drastically lower the water production.

3. Fill Water Temperature

The water used to fill the machine may affect the water production. Cooler fill water will take more time/energy to heat to the boiling point.

4. Ambient Air Temperature

Water distillers with cooling fans must have sufficient ventilation so that the boiled steam can be cooled and condensed into distilled water. Restriction of air flow (such as a closed cupboard) will result in a hot ambient air build up which will not allow all of the steam to condense into distilled water and some water production may escape as steam into the atmosphere through the charcoal filter or volatile gas release vent. This steam loss can also occur in hot summer periods or very warm climates.

5. Heating Element and Boiler Cleanliness

As the water distiller removes impurities, some of the impurities may cling to the boiler tank and the heating element. Any of this scale may build up around the heating element and actually insulate it, which will drastically decrease the thermal efficiency of the heating element and require more time/energy to boil water, which will decrease the water production.

6. Altitude

The water distiller is rated at the altitude of the manufacturer, which is approximately 675 m (2214 ft) above sea level. Locations lower than this (closer to sea level) will have reduced water production due to the higher boiling point of water at higher atmospheric pressures at lower altitudes.

7. Operating Time, Warm-up Period & Suitable Storage

When checking the water distiller production, the start time should be when the first few drops of water have entered the charcoal filter canister. Do not start timing when the distiller turns on as it takes a few minutes for the heating element, boiler tank and water to heat up. The distiller production rating does NOT account for this time, but rather the continuous production after the distiller is up to temperature. Ensure when checking production that you have suitable water storage for holding the amount of water that will be produced.

8. Manual Fill Boiling Tank Fill Level

When checking the water distillation production on manual fill water distillers, the amount of water initially poured into the boiling tank will affect the production. Water should be filled to the water level pin so that once the water is hot the maximum amount of water can be distilled without having to heat up and refill. Under-filling the boiler will decrease the amount of water distilled. Again, the warm-up time **should not** be included in the production rate.

9. Boiling Tank Heating Element


Once all other factors have been eliminated or checked, have an authorized service center check that the proper heating element has been installed in your distiller. Always replace heating elements with the manufacturers supplied heating elements. Other elements are available from hardware stores, home repair centers, etc. and look like the same element but they are almost always not the same. Even if the voltage and wattage are the same, they usually have different wattage densities and most likely different element sheath materials, which will result in premature heater burnout in continuous water distillation of raw water. These heating elements will also likely affect your water distillation capacity.

10. Combination of the above Factors.

Often a reduced water distiller's production is a combination of many or all of the above factors. To ensure maximum production from your water distiller, keep your water distiller clean and operate it in a well-ventilated area and use room temperature feed water where possible.

Understanding How Pure Water is Produced

Your water distiller operates the same as Nature's hydrological cycle. See the **Hydrological Cycle Diagram** below. Nature uses the heat of the sun to vaporize surface water and draw it into the atmosphere leaving the impurities behind. As the vapour cools it condenses and returns back to the earth as rain or snow. When rain or snow falls it passes through smog, dust and many other types of contaminants. These contaminants can be picked up by the falling rain or snow. Additional contamination of water can occur when it moves through the ground.

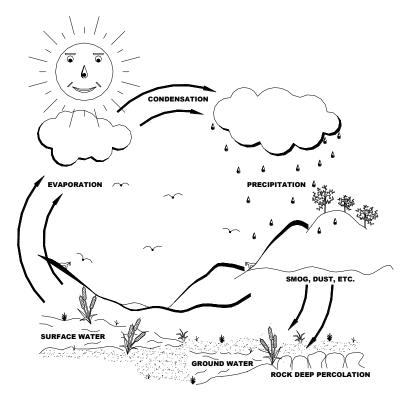

Hydrological Cycle Diagram

Water Distillers complete their own hydrological cycle. The advantage of a water distiller over Nature is that the water is produced in a closed environment free of pollution and contaminants.

Your water distiller uses the boiling tank to heat the feed water to create steam. The steam rises from the boiling tank leaving almost all of the impurities behind. The steam enters the condensing coil and is cooled by the fan. As the steam cools it condenses into pure distilled water and is stored in a stainless steel storage tank. The charcoal filter between the condensing coil and storage tank and the volatile gas vent remove any contaminants that boil at lower temperatures than the boiling point of water. The impurities from the process remain in the boiling tank and are drained to a suitable drain.


Finding a Good Installation Location

Before installing your water distiller, it is important to find a good location. Following the points listed below will provide the best location for your water distiller:

- 1. The water distiller must be plugged directly into a dedicated 120VAC, 15 Amp wall outlet.
- 2. The water distiller requires sufficient airflow around it to operate. The air is used to cool the water distiller condensing coil. Locate the water distiller in an area that will provide enough room for good air flow. Do not place the water distiller in an enclosed area like a closet.
- **3.** When using the Automatic Feed Water Line Connection to the water distiller, locate the water distiller close to a household cold water line (after a water softener if available).
- **4.** Locate the water distiller where a pail or suitable container can be used for the impurities drain. Close to a floor drain (sewer) is best especially if the Automatic Drain Kit is installed.
- **5.** When unpacking the water distiller and options note the sizes and consider this when picking an installation location.
- Locate the water distiller away from a bedroom or other area where the noise of the water distiller may be undesirable.
- Locate the water distiller close to the kitchen faucet area if the automatic pump option is being used.
- **8.** Locate the water distiller in an area that is clean and free of dust, so the cooling coil remains clean when the fan is drawing fresh air.

Unpacking Your Water Distiller

Your Water distiller has been shipped in one box. Any optional accessories have been shipped in a separate box(es). The **Water Distiller Box Components Diagram** shown as follows displays all of the parts that will be in the water distiller box.

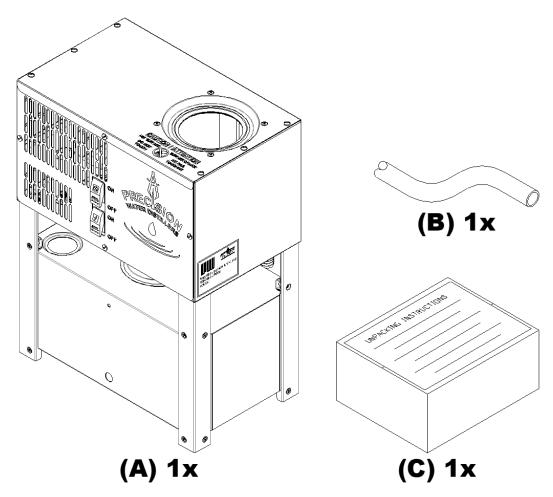

Water Distiller Box Components Diagram


Water Distiller Box Check List

Check List

- □ (A) 1 PWS River Water Distiller Head and Storage Tank
- □ (B) 4' 1" x 1 ¼" Drain Tube
- □ (C) 1 Parts Bag

(Water Distiller Parts Bag Components Diagram shown as follows)

Water Distiller Parts Bag Components

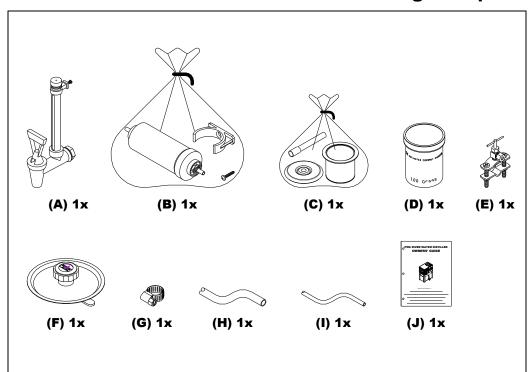


- A. Sight Gauge #500516
- B. 6" Sediment Filter Kit #510256
- C. Filter Canister, Stainless Steel #510232
- D. Coconut Charcoal, Sample Jar #080116
- E. Valve, Self Piercing #036005
- F. Lid, Boiling Tank #500184
- G. Gear Clamp, Stainless #080121
- H. Clear Drip Sterilization Tube 2' #052002
- I. ¼" Feed Line 16' #052000
- J. River Owner's Guide #097509
- 1. Remove all loose pieces from the water distiller box and save all packaging until all the parts are identified and located.
- 2. Check inside boiler tank and storage tank for any parts that may be shipped in that area. If any parts are missing or if you feel you have been given the wrong part, DO NOT return the water distiller unit. Contact your dealer for the required parts. They will be pleased to assist you.
- **3.** Remove all remaining protective plastic from water distiller head, storage tank, boiling tank lid, storage tank lid, and distiller legs.

Water Distiller Installation Tools

TOOLS REQUIRED:


For Water Distiller Installation

- (A) #2 Phillips screwdriver
- (B) Slotted screwdriver
- (C) 7/16 wrench

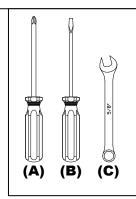

Storage Tank Assembly

 Disconnect the Control Cable that is between the water distiller head and the storage tank by loosening the locking ring and unplugging. See the Control Cable Disconnect Diagram below.

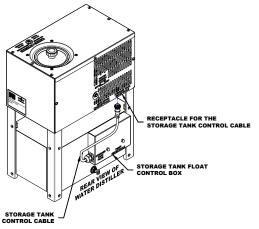


Control Cable Disconnect Diagram


2. Remove the water distiller head from the storage tank by removing the screws that are securing the top of each leg to the head of the water distiller. Then, lift the distiller head straight up off of the storage tank. See the Water Distiller Head Removal Diagram below.

Water Distiller Head Removal Diagram


Remove the sight gauge with valve, #500516, from the parts bag.

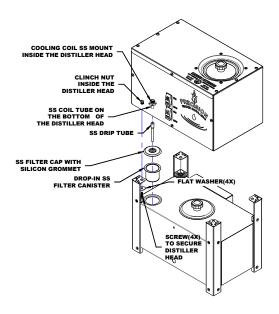

Sight Gauge Installation Diagram

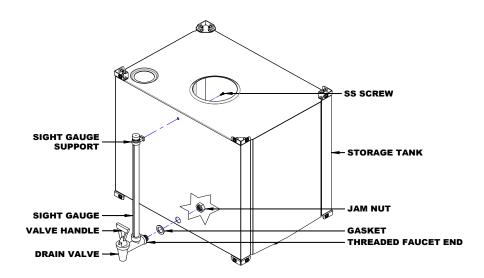

- **3.** Refer to **Sight Gauge Installation Diagram** above. Remove the stainless steel hex jam nut from the threaded body of the valve (leaving washer gasket on threads).
- **4.** Remove the storage tank lid (if installed) by holding down on the lid and turning the black knob counter clockwise while lifting, approximately five turns. Slide the lid to one side and turn the knob and lid together while tilting. This should allow the Tee Bar bracket under the lid to come out of the tank opening. Slide the lid out.
- **5.** Push the gasket of the sight gauge tightly up against the valve.
- **6.** Insert the threaded valve end with gasket attached through the hole on the front of the storage tank.
- 7. While holding the sight gauge with valve in the storage tank hole with one hand, insert your other hand with the stainless steel hex jam nut through the storage tank lid opening.
- **8.** Place the hex nut onto the threaded end of the valve.
- **9.** Hand tighten the hex nut clockwise onto the valve.

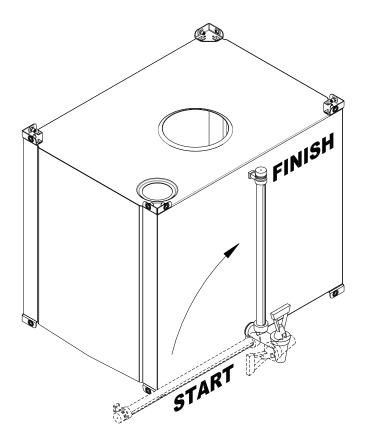

Tightening Sight Gauge Nut Diagram

10.Refer to the **Tightening Sight Gauge Nut Diagram** above. To fully tighten the nut, turn the valve counter-clockwise 1/4 of a turn to the start position and ensure that the jam nut is still hand tight. Holding the jam nut, turn the valve clockwise until upright at the finish position.


NOTE: The sight glass is fragile, do not push on the gauge (push on bottom near threaded area).

- **11.**Remove the #10-24 screw from the sight gauge support and install through the inside of the storage tank using a Phillips screwdriver. Tighten until snug only.
- **12.**Make sure the storage tank is free from any dust or material and replace the storage tank lid.
- **13.**Check for leaks when storage tank begins filling.

Manual Drain Valve Tube Installation

NOTE: If you have purchased the Automatic Electric Drain Kit, Go to the **PWS AED-1 Automatic Electric Drain Kit Installation** section of the guide and install it now.

1. Refer to the Manual Drain Valve Tube Installation Diagram shown below. Push the drain tube onto the elbow and secure with gear clamp using a slotted screwdriver. Run the drain tube to a container or suitable floor drain like the sewer.

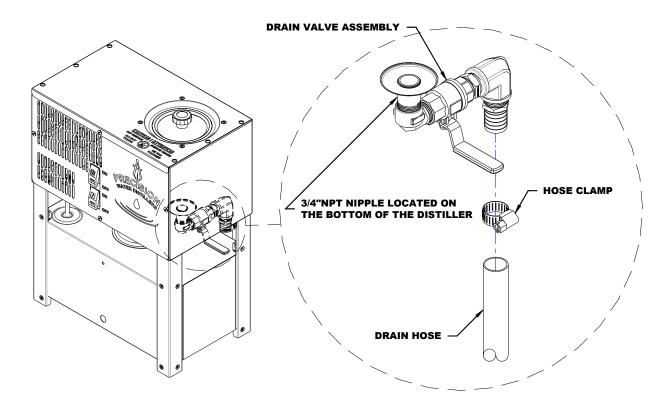


Manual Drain Valve Tube Installation Diagram

Feed Water Line Connection

TOOLS REQUIRED:


For Feed Water Line Connection

- (A) Slotted Screwdriver
- (B) Drill with 1/8" drill bit (For Steel or Brass Water Line)
- (C) 1/2" Open End Wrench or
- (D) Pliers
- (E) Utility Knife

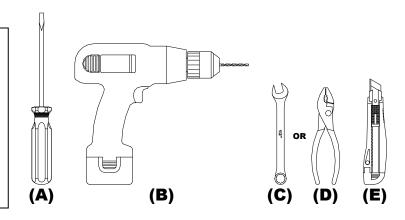

 Select a household water line to supply the water distiller with feed water. Be sure to use a cold water line and pick a suitable location closest to the water distiller location. The maximum inlet water pressure is 827370 pascals or 120psi.

NOTE: If you have a water softener be sure to connect the water distiller feed line on the outlet side of the softener as soft water will reduce cleaning and maintaining of the water distiller. Using a water supply from the outlet of a hot water heater is not recommended as some of the internal components of the water distiller are not designed to be used with water temperatures above normal cold household water supply. Scale and sediment from hot water tanks can also cause problems by plugging the water distiller raw water plumbing components.

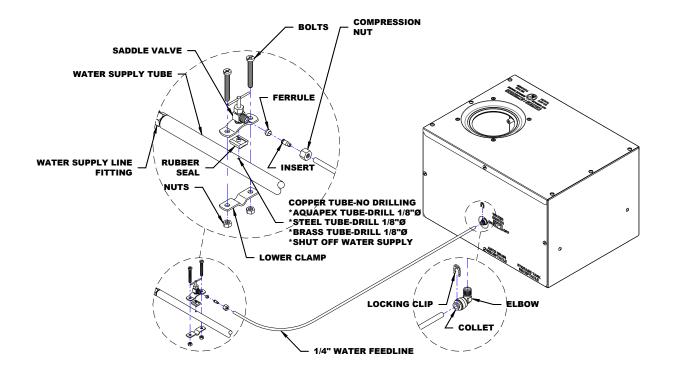

Feed Water Line Installation Diagram

Refer to the Feed Water Line Installation Diagram above. Install the self-piercing valve
kit onto the household water feed line with a slotted screwdriver. Detailed instructions for
installing the valve are listed below.

Instructions:

For Copper and Plastic Water Line:

NO DRILLING OR WATER SHUT- OFF REQUIRED.

Caution: Be sure piercing pin is completely backed up into valve body by turning handle counter-clockwise.

- 1. Loosely assemble one side of top clamp to bottom clamp with screw and nut provided.
- 2. Be sure rubber gasket is in place over piercing needle and position valve assembly on copper or plastic water line.
- 3. Assemble other side of top clamp to bottom clamp with remaining screw and nut and tighten both pieces with a slotted screwdriver until valve assembly is firmly attached to water line.
- 4. Complete compression connection to valve outlet.
- 5. Turn valve handle clockwise to pierce the supply line and close the valve.
- 6. Open valve by turning handle counter-clockwise to desired water flow rate.


For Steel and Brass Water Line:

- 1. Turn off the household water supply.
- 2. Drill a 1/8" hole at the bottom of the steel or brass water line that will be used for the water distiller water feed line.
- 3. Loosely assemble one side of top clamp to bottom clamp with screw and nut provided.
- 4. Be sure the piercing pin is turned into the valve body. Place the rubber gasket over the piercing needle and position needle into drilled 1/8" hole.
- 5. Assemble other side of top clamp and bottom clamp with remaining screw and nut and tighten both pieces with a slotted screwdriver until valve assembly is firmly attached to the water line.
- 6. Complete compression connection to valve outlet.
- 7. Turn on household water supply.
- 8. Open flow rate by turning saddle valve handle counter-clockwise to desired flow rate.
- **3.** Attach the ½" water line to the self piercing valve with a ferrule, insert and compression nut using a ½" open end wrench or pliers. Route the ½" tubing to the inlet on the back of the water distiller head. Cut approximately one foot longer than needed with suitable water line routing.
- **4.** Push the ½" household feed line fully into the elbow and reinstall the locking clip between the elbow and collet.

5. You may install the 6" Sediment Filter Kit #510256 (Kit includes: #080054 Sediment Filter with #054073 Mounting Clip, 2 locking clips #034009 and #010008 screw) at this time. Install anywhere between the saddle valve and your water distiller.


Pre-Filter Installation


- 1. Before you install your Sediment Pre-filter, see the diagram and parts list for all necessary parts.
- 2. Make sure there are no electricals in the surrounding area.
- 3. Make sure the water is still turned off.
- 4. Remove the rubber plug tube on each end of the filter by holding the little collar down evenly around the plug, in order to release the plug. You should be able to pull plugs out easily.
- 5. Mount the Nylon Bracket to the wall with the screw, in a horizontal direction, (if available)
- 6. Snap the filter into the nylon bracket with the big round end on top where you want the water going in at; and the smooth end where you want the water going out to the distiller.
- 7. Install the filter in between the saddle valve and the distiller (see diagram below). Install the ¼" water feedline from the saddle valve end to the big round end of the filter, by pushing it in until it seats on the smooth end of the filter. Install the ¼" feedline to the guick connect elbow on the back of the distiller.
- 8. Turn on the water and check for leaks.

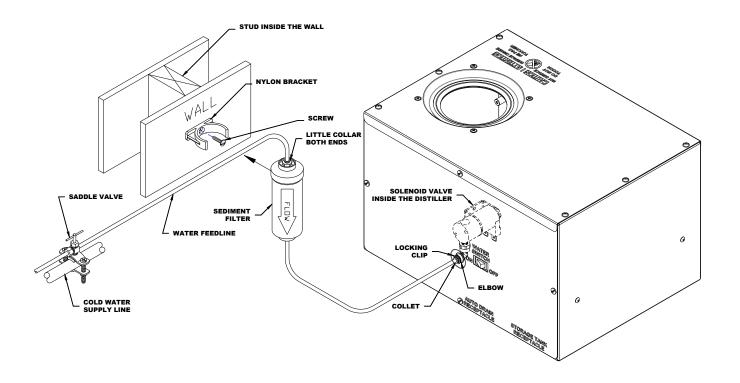

6. Make sure the Control Cable is connected between the water distiller head and the storage tank by turning the plug until the splines lock and then turn the locking ring until finger tight. See the **Control Cable Connection Diagram** below.

Control Cable Connection Diagram

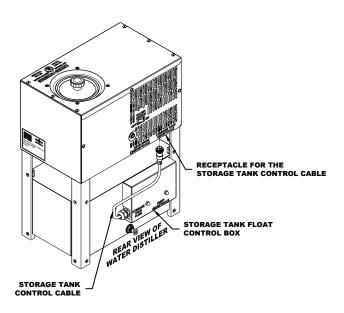

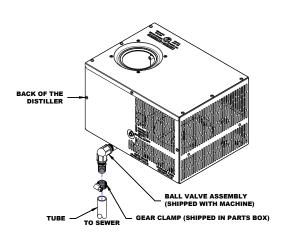


Boiling Tank Drain Valve Diagram

- 7. Refer to the Boiling Tank Drain Valve Diagram above. Close the boiling tank drain ball valve at the rear of the water distiller (ball valve is shown in the closed position). If the water distiller is equipped with the PWS AED-1 Automatic Electric Drain the ball valve should be in the open position.
- **8.** Tighten the saddle valve handle completely by turning clockwise to pierce the water supply line (copper or plastic water line only). Open the water supply to the water distiller by turning the saddle valve handle counter-clockwise. Check for leaks.

Boiling Tank Lid Installation

Remove any protective plastic coating (white, blue or clear plastic) from the lid.
 Boiling Tank Lid Operation Diagram

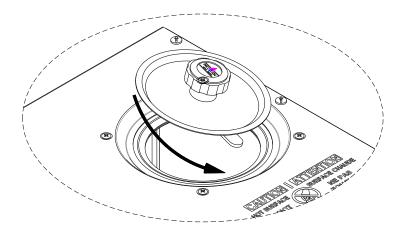

- 2. Refer to the **Boiling Tank Lid Operation Diagram** above. Take the boiling tank lid in your hand. Hold the Tee Bar bracket and turn the Lid Knob counter-clockwise so that there is ½" of space between the Tee Bar bracket and the lid.
- 3. Tip the lid so that the Tee Bar bracket slips under the rim of the boiling tank opening on one side, and then slide the lid so the Tee Bar bracket slips under the other side of the rim. Center the lid.
- **4.** Turn clockwise to tighten the lid onto the boiling tank. The water level pin inside the boiling tank will prevent the lid from turning while tightening. Practise removing and replacing the lid a few times as the lid will need to be removed each time the water distiller is cleaned.


Storage Tank Lid Removal and Installation

- 1. To remove the storage tank lid, turn the Lid Knob counter-clockwise while lifting. Lifting while turning holds the Tee Bar bracket under the lid and allows you to loosen the lid. Continue turning and lifting until there is ½" of space between the Tee Bar bracket and the lid.
- 2. Tip the lid so that the Tee Bar bracket slips out from under the rim of the storage tank opening on one side, and then slide the lid so the Tee Bar bracket slips out from under the other side of the rim.
- **3.** To replace the storage tank lid, tip the lid so that the Tee Bar bracket slips under the rim of the storage tank opening on one side, and then slide the lid so the Tee Bar bracket slips under the other side of the rim. Center the lid.
- **4.** While lifting up on the storage tank lid knob, turn clockwise to tighten the lid onto the storage tank. Tighten until snug only.

Operation

NOTE: Read all parts of the Owners Guide before operating the water distiller. Follow the Before Initial Water Distiller Operation steps and be sure to complete a Steam Sterilization of the Water Distiller Head, Filter Canister and Storage tank before distilling water for household use for the first time or after a period of storage or non-use.

Controls

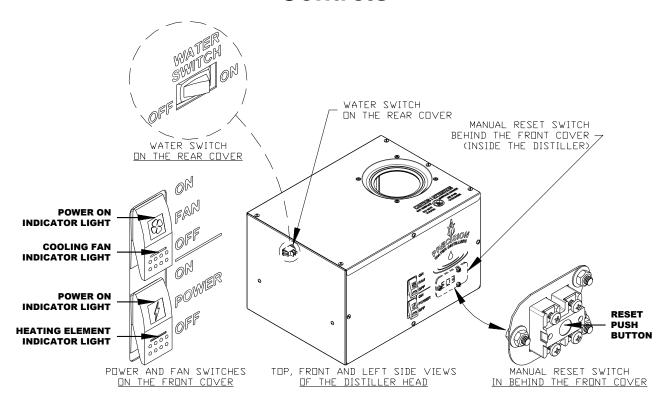

Operation Switches Diagram

Refer to the **Operation Switches Diagram** above. There are two grey control switches on the front of your water distiller for the main power and the fan power. There is a small water switch located on the rear of the water distiller head. The over-temperature, manual safety reset switch, is located on the front of the distiller head, hidden under the front cover. Should this safety reset switch shut the unit down, contact your dealer for service, as this can indicate a problem with the unit.

Power - ON/OFF



- Red indicator light.
- Normally ON when water distiller is operating. Controls power to the entire water distiller.
- Top square indicator light is illuminated whenever the switch is on. It will remain illuminated even when the water distiller is not operating.
- Bottom rectangular indicator light is illuminated only when the heating element in the boiler is on.
- Turn power switch to OFF to stop Water distiller operation.


NOTE: A clicking sound may be heard if the Water distiller is plugged into the wall electrical outlet, the power and water switches are in the 'ON' position and the boiler is empty. The clicking sound is the internal water solenoid valve activating.

Fan - ON/OFF




- Amber indicator light.
- Normally ON when water distiller is operating. Controls power to the cooling coil fan.
- Top square indicator light is illuminated when the switch is on. It will remain illuminated even when the water distiller is not operating.
- Bottom rectangular indicator light is illuminated only when the fan is on. Fan should be running if the water distiller is distilling water.
- Turn Fan Switch to OFF only when performing a steam sterilization of the water distiller.

Water – ON/OFF

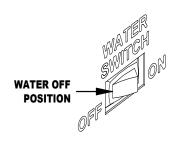


- Normally ON when water distiller is operating with automatic feed water supply line. Will automatically fill the boiler tank from the water supply line.
- Red side of switch will NOT be visible when the switch is off.
- The boiler will fill with water until the upper boiler water level is achieved.

Overheat Reset Switch - Manual Reset

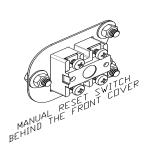


- Located on the front of the water distiller head, hidden behind the front cover.
- The reset button will shut the unit off if the water distiller has overheated, it may be reset once the water distiller has cooled off. If the situation continually repeats itself this may also indicate a problem and should be looked at by a service center.
- The reset button is a safety feature and is designed to shut the water distiller down should it overheat.

Fuse - 1 Amp Slow Blow 240V



- This is a feature to protect the optional pump electrical circuit.
- Only used on the optional pump box if purchased.
- Always replace with the proper fuse.

Storage Tank Drain Valve

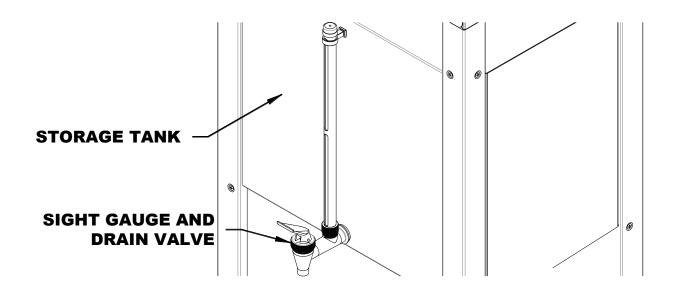


To enjoy pure water from your water distiller storage tank use the storage tank drain valve on the front of the storage tank. The valve handle can be tipped to control the flow of water or locked in the open position to fill large containers. Water can be pumped automatically to a faucet at the kitchen sink or other location by installation of an Optional Pump Kit. See PWS APK-21 Pump Kit and PWS APK-21 Pump Kit Installation in the Optional Accessories Section for a diagram of the kit and installation instructions.


Before Initial Water Distiller Operation

- 1. Ensure the boiling and storage tank lids are in place and tight.
- **2.** Make sure all control switches are turned off. (See Operation-Controls Section if not sure how to operate).
- **3.** Ensure the water supply saddle valve is turned fully on by turning counter-clockwise.

NOTE: Manual Fill Operation (If a pressurized water supply is not available such as using the water distiller at a cottage or on vacation) – Fill the boiler tank by removing the boiler tank lid and pouring water into boiler tank up to bottom of the water level pin. Refer to Boiling Tank Water Gauge Pin Diagram.

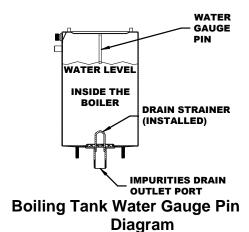

- **4.** Plug Water distiller into a wall outlet.
- 5. Turn Power, Fan and Water switches ON (Do not turn Water switch on if filling manually).
- **6.** Water should be entering the boiling tank. Remove the boiling tank lid to check. Replace lid if water is entering. The fan and heater should turn on as soon as the water level is above the heating element.
- 7. Check for leaks around the saddle valve and supply pipe and around the water solenoid on the water distiller head. See Water Solenoid Valve in Water Distiller Head Diagram below.

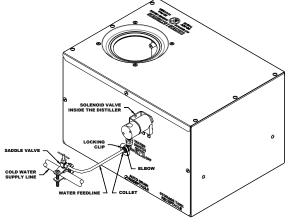


Water Solenoid Valve in Water Distiller Head Diagram

8. If there are no leaks and the water distiller is operating as described above, shut all control switches off and perform steam sterilization on the water distiller head, filter canister and storage tank as described in the **Maintenance and Cleaning** section.

Normal Operation

- 1. Ensure boiling and storage tank lids are in place and tight.
- **2.** Ensure all electrical plugs are properly connected and the water supply valve is turned on.
- **3.** Turn the Power, Fan and Water switches to the ON position. Water will enter the boiling tank, the heating element will energize and the cooling fan will start.
- **4.** The water distiller will continue operating and distilling water until the storage tank is full. At this time the water distiller will turn off until the storage tank is drained to approximately 2/3 full and then the automatic water distiller will start producing distilled water again.
- **5.** To prevent a build up of scale and contaminants in the boiling tank, it is recommended that the impurities from the boiling tank be drained after each distillation process or ten gallons of distilled water. Routinely draining the impurities will prolong the life of the water distiller and reduce cleaning.

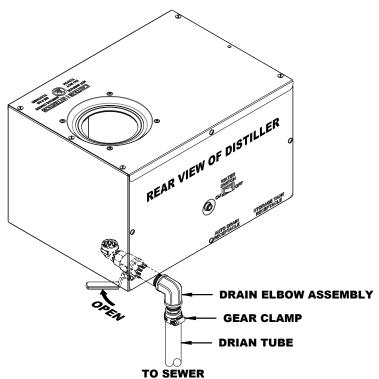

Manual Drain Valve Location Diagram

6. Refer to the Manual Drain Valve Location Diagram above. The water distiller boiling tank can be drained by opening the ball valve and draining into a suitable floor drain or container (valve is shown in the close position). The drain may be operated automatically by installation of the Optional Automatic Electric Drain System. See PWS AED-1 Automatic

Electric Drain Kit Installation in the **Optional Accessories Section** for a diagram of the kit and installation instructions.

Maintenance and Cleaning


Introduction

The purpose of purchasing a water distiller is so you will not have to drink the impurities in your drinking water. A water distiller effectively removes the impurities and chemicals from your water and returns the taste of pure water so that it is pleasing and healthy to drink for the entire family. It is important to also keep the water distiller clean so that it can perform properly and efficiently. Regular cleaning and maintenance will allow the water distiller to continually provide pure water for a very long time.

NOTE: Regular Cleaning is much easier than trying to clean after a prolonged period of time!

Regular Inspection and Cleaning of the Boiling Tank

1. To prevent a build up of scale and contaminants in the boiling tank, it is recommended that the impurities from the boiling tank be drained after each distillation process or ten gallons of distilled water. There may be an off colour line at the seams of the boiler tank, this is caused by the TIG welding process used during manufacturing. This is normal and is not a sign of any concern.

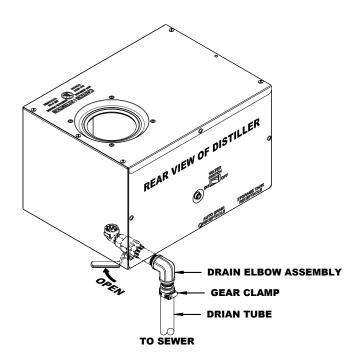


Manual Drain Valve Location Diagram

2. Refer to the **Manual Drain Valve Location Diagram** above. The water distiller boiling tank can be drained by opening the ball valve and draining into a suitable floor drain or container.

- **3.** The drain may be operated automatically by installation of the Optional Automatic Electric Drain System. See **PWS AED-1 Automatic Electric Drain Kit Installation** in the **Optional Accessories Section** for a diagram of the kit and installation instructions.
- **4.** With the manual drain valve or the Automatic Electric Drain it is important to develop a regular maintenance routine. Every two weeks or 50 gallons of distilled water take a look inside the boiling tank when the water distiller is cool.
- **5.** Check for scale build up on the walls of the boiler tank and the heating element. The heating element is the most critical. If there is 1/8" of build up or more on the heating element, then it is time to clean the boiling tank using vinegar or descaler cleaner (available from your dealer). This process is described in the next section.
- **6.** After checking the boiling tank every two weeks for about three months, you will be able to set up your own schedule as to how often the boiling tank needs to be cleaned. Distilled water quantity use and raw water quality will determine your schedule.

Cleaning the Boiling Tank using the Cleaner Descaler (Available from your Dealer)

- 1. Turn all switches off and allow the water distiller to cool down.
- **2.** If the water distiller is equipped with an Automatic Electric Drain, close the ball valve behind the water distiller head.
- 3. Remove any loose scale from inside the boiling tank by hand through the boiler lid. Remove the drain strainer and inspect for sediment or plugged holes. Clean if necessary. See the Boiling Tank Strainer Removal Diagram below to see how to remove the strainer.

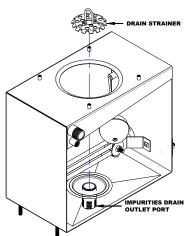


Boiling Tank Strainer Removal Diagram

- **4.** Remove the filter canister and place the sterilization tube onto the coil tube to by-pass the storage tank. See **Steam Sterilization of Water Distiller Head** in this **Maintenance and Cleaning** section for more details.
- **5.** Add 3 tablespoons of descaler cleaner to the boiling tank.

CAUTION: Descaler is a corrosive and poisonous substance. Read safety precautions on the package. As the initial water is added to the descaler in the boiling tank it will produce a bubbling foam substance. Do not overfill the boiling tank. Always leave boiling tank lid off when ever the boiling tank is being descaled to reduce fumes travelling through the cooling coil. Dispose of the first gallon of distilled water as a precaution.

- **6.** Fill the boiling tank half full with hot tap water.
- **7.** Mix the cleaning solution well to dissolve the descaler in the water.
- **8.** Fill up the remaining portion of the boiling tank with hot tap water to the bottom of the water gauge pin. See **Boiling Tank Water Gauge Pin Diagram** below.

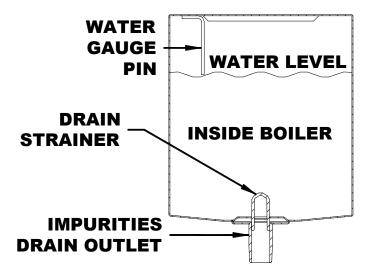

DRAIN STRAINER ATTACHED TO THE DRAIN HOLE

Boiling Tank Water Gauge Pin Diagram

- **9.** Let the solution stand overnight. Leave the boiling tank lid off during cleaning to prevent descaler fumes from entering the cooling coil.
- **10.**The next morning or when the mineral content is soft, drain the boiling tank using the ball valve. Remove any remaining loose scale by hand using rubber gloves.
- **11.**Repeat cleaning if necessary.
- **12.**Once all the scale has been removed, rinse the boiling tank several times with warm tap water and remove any large pieces of scale by hand.
- **13.**Replace the drain strainer. The strainer stops large impurities from plugging the ball drain valve or Automatic Electric Drain valve.
- **14.**Replace the boiling tank lid and complete steam sterilization process on the boiling tank. See **Steam Sterilization** in this **Maintenance and Cleaning** Section. Reinstall the filter canister.
- **15.** The boiling tank is now clean and ready to produce pure water again.

CLEANING THE BOILING TANK USING REGULAR WHITE VINEGAR

- 1. Pour full strength vinegar slightly over the visible water line.
- 2. Let Stand overnight or longer. (Heat up to near boiling if mineral build-up is excessive to speed up and aid the cleaning process.)
- 3. Drain out the vinegar, use a cloth and wipe out the sediment remaining.
- 4. If distiller is not clean, the vinegar is not strong enough, refill with full strength vinegar once again and repeat #2-#3. You can keep the vinegar to reuse again for cleaning. You may be able to reuse the vinegar several times until you find it is not strong enough to work.
- 5. Once the scale has been removed, rinse the boiling tank several times with warm tap water.
- 6. Complete the steam sterilization process on the boiling tank. See **Steam Sterilization** section. Reinstall the filter canister.
- 7. Machine is now ready for use.


Please Note: This is a 'Green' alternative to clean the boiling tank, depending on your water source; you may have to use the Descaler Cleaner product supplied through your dealer.

Always remember to drain the impurities out of your boiling tank after each use! This will cut down on the amount of manual cleaning required.

You may also take advantage of the **Precision Auto Drain** Accessory to automatically drain the impurities out of your boiling tank after each cycle is completed. Ask your Precision Dealer about the **PWS AED-1**, Automatic Drain Kit!

REPLACING CHARCOAL IN CHARCOAL FILTER CANISTER

NOTE: Replace charcoal in filter every month or every 200 gallons of distilled water.

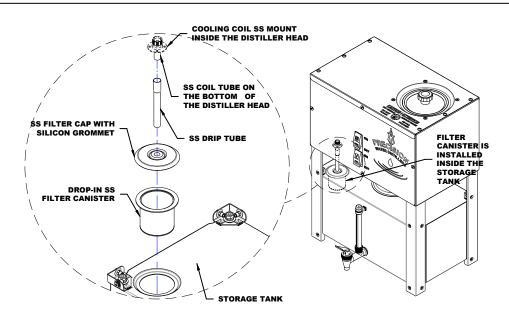

Charcoal Replacement Diagram

Turn all switches off and allow the water distiller to cool down.

- Refer to the Charcoal Replacement Diagram above. Remove the complete charcoal filter canister by lifting the stainless steel drip tube. Remove the filter cap by sliding the cap towards the front of the storage tank and lifting it out, remove drip tube, then remove filter canister.
- 2. Over a sink or suitable garbage can, empty charcoal from canister and rinse. Use caution not to discard mesh screens as it will be required for future use. One mesh screen is for the bottom of the canister and one is for the top of the charcoal filter canister.
- **3.** Fill canister 2/3 full with new charcoal and rinse over a sink or pail with approximately 2 cups of distilled water until water runs clear.
- **4.** Replace the filter cannister onto the storage tank, slide large end of drip tube up onto the cooling coil tube.
- **5.** Replace the filter cap and slide drip tube down into place, pushing the tube into the silicone washer until snug.

Introduction:

Steam Sterilization should be performed on the water distiller boiler, filter canister and storage tank before the water distiller is used for the first time or after a period of storage or non-use. After initial sterilization, the boiler should be steam sterilized after any maintenance is performed and/or cleaning including the descaling process. The storage tank requires cleaning and steam sterilization after any maintenance, or if there are any problems with the quality of the distilled water.

If there is a water quality concern and the system may be contaminated, it is important to first remove the source of contamination and remove all contaminated debris and then complete a Liquid Sterilization before a Steam Sterilization.

Sterilization

Liquid Sterilization of Storage Tank and Optional Pump Water Line System

NOTE: This is performed whenever it is suspected that the water distiller head, storage tank or pump water line system are contaminated.


- 1. It is important to first remove the source of contamination and remove all contaminated debris before liquid sterilization.
- 2. Drain the water distiller and water lines as much as possible.

NOTE: Liquid Sterilization Solutions can be made from Household bleach. The bleach should be diluted to 100-200 PPM. Products such as Javex, have 6% Sodium Hypochlorite and should be diluted by placing 3 teaspoons per gallon of water. Always use Chlorine bleach that does not contain any other ingredients. Alternatively, Hydrogen Peroxide solutions may be used by placing 3 teaspoons per gallon of water.

- **3.** Add 2 gallons of Liquid Sterilizing solution to the water distiller storage tank. If desired, spray some of the solution throughout the inside of the storage tank. You may need more sterilization solution if you are using more that 25 feet of pump water line.
- 4. Run the pump by opening the faucet at the kitchen sink to put sterilizing solution through all water lines and dispensers. All the lines will be full of sterilization solution once you can smell the solution at the faucet. Wait 20 minutes.
- **5.** Rinse the entire inside of the storage tank with at least 2 gallons of distilled water. Run the pump to clear the lines of the sterilizing solution.
- **6.** Repeat the flushing of the storage tank with distilled water 2-3 times, rinsing the pump and all water lines at the same time. Continue until there is no Chlorine smell coming from the faucet.
- 7. Complete the Steam Sterilization of the boiling and storage tanks.

Steam Sterilization of Water Distiller Head

1. Make sure the water distiller is cool before starting.

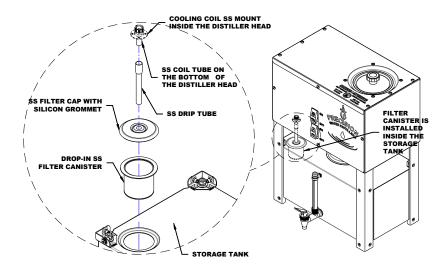


Water Distiller Head Steam Sterilization Diagram

- 2. Refer to the Water Distiller Head Steam Sterilization Diagram above.
- **3.** Remove the charcoal filter.
- **4.** Install the sterilization tube. Place the sterilization tube on the 3/8" stainless steel filter inlet tube on the bottom of the water distiller head.
- **5.** Place the other end of the steam sterilization tube into a container as it will drip water and steam.

NOTE: If Water Distiller is filled manually, fill the boiling tank with water to the bottom of the water gauge pin.

a. If you are completing the steam sterilization for the first time, plug the water distiller into a dedicated wall outlet.

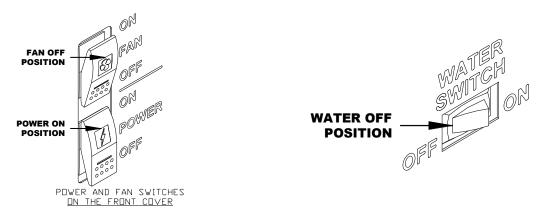


Steam Sterilization Operation Switches Diagram

- 6. Refer to Steam Sterilization Operation Switches Diagram above. Turn only the power and water switches ON. Leave the fan switch OFF. As the water distiller continues to heat up, it will sterilize the water distiller with steam by allowing pure steam to travel out of the cooling coil. Water and steam will drip from the sterilization tube. Caution: The Water Distiller is extremely hot during sterilization.
- 7. Leave the water distiller on for 1 hour.
- **8.** After sterilization cycle is complete. Turn the fan switch ON and allow any water in the cooling coil to drain. Leave the water distiller running with the fan on for about 15 minutes.
- **9.** The water distiller will be very hot so turn all switches OFF (power, water, fan) and let the water distiller cool down for approximately 1 hour.
- **10.** Remove the sterilization drip tube by pulling the plastic tube off the stainless steel charcoal filter inlet tube (keep the sterilization tube for future sterilizations).
- 11. Replace the charcoal in the charcoal filter canister. See Replacing Charcoal in Charcoal Filter Canister in this Maintenance and Cleaning Section.
- **12.** The water distiller head is sterilized and ready for operation.

Steam Sterilization of Water Distiller Head, Filter Canister and Storage Tank


1. Make sure the water distiller is cool before starting.

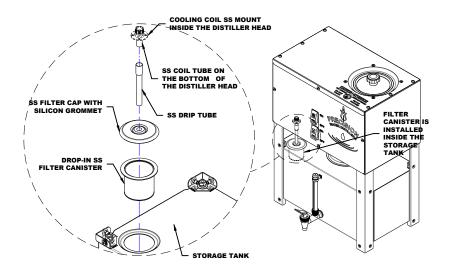

Water Distiller Head, Filter Canister and Storage Tank Steam Sterilization Diagram

- 2. Refer to the Water Distiller Head, Filter Canister and Storage Tank Steam Sterilization Diagram above.
- **3.** Remove the charcoal filter canister. Remove all charcoal and rinse until clean. Replace empty filter canister between water distiller head and storage tank
- **4.** Place a container under the front storage tank sight gauge valve and leave the valve in the open position.

NOTE: If Water Distiller is filled manually, fill the boiling tank with water to the bottom of the water gauge pin.

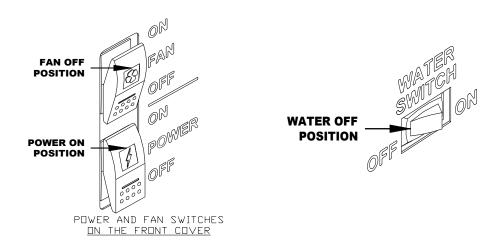

Steam Sterilization Operation Switches Diagram

- 5. Refer to Steam Sterilization Operation Switches Diagram above. Turn only the power and water switches ON. Leave the fan switch OFF. As the water distiller continues to heat up, it will sterilize the water distiller head, filter canister and storage tank with steam by allowing pure steam to travel out of the cooling coil. Water and steam will drip from the storage tank valve. Caution: The Water Distiller is extremely hot during sterilization.
- **6.** Leave the water distiller on for 1 hour.
- **7.** After sterilization cycle is complete.

 Turn the fan switch ON and allow any water in the cooling coil to drain. Leave the water distiller running with the fan on for about 15 minutes.
- **8.** The water distiller will be very hot so turn all switches OFF (power, water, fan) and let the water distiller cool down for approximately 1 hour.
- **9.** After cooling down, the water distiller may need to be tipped or rocked forward and back to remove all the water from the storage tank.

- **10.**Close the storage tank sight gauge valve.
- 11.Replace the charcoal in the charcoal filter canister. See Replacing Charcoal in Charcoal Filter Canister in this Maintenance and Cleaning Section.
- **12.**The water distiller head, filter canister and storage tank are sterilized and ready for operation.

Maintenance Schedule Table

	Initially	Weekly	Monthly	Semi- Annually	Annually	As Needed
1) Check Scale Build Up.		X				X
2) Change Charcoal in Charcoal Filter Canister.	X		Х			X
Clean Boiling Tank using Vinegar or Cleaner Descaler.			X			X
4) Steam Sterilization of Boiling Tank after cleaning.						X
5) Steam Sterilization of Boiler and Storage Tanks.	X					X

Owner Maintenance Record Table

	<u> </u>	<u>iaii itoi iai</u>		31 G 1 G 01	<u> </u>
	Change Charcoal in Charcoal Filter Canister	Clean Boiling Tank using Vinegar or Cleaner Descaler	Steam Sterilization of Boiling Tank	Steam Sterilization of Boiling and Storage Tanks	
Date	Jan 21/23				
Completed By	BDR				
Date					
Completed By					
Date					
Completed By					
Date					
Completed By					
Date					
Completed By					

Troubleshooting
Caution! Always Disconnect Water Distiller Electrical plug and Let the
Water Distiller cool down completely before completing any Troubleshooting.

PROBLEM	CAUSE
A) Water distiller does not	1. Water distiller is not plugged in securely to the
operate.	wall outlet or the circuit breaker is off.
	2. Power switch on the water distiller is turned off
	3. Reset button has shut the unit off. The reset
	button will shut the unit off if the water distiller
	has overheated, it may be reset once the water
	distiller is cooled off. This may also indicate a
	problem and should be looked at by a service
	center. The reset button is a safety feature and
	is designed to shut the water distiller down
	should it overheat. Unit must be unplugged,
	front cover removed to gain access and should
	be done by a qualified Service Center.
	Reset button is faulty and needs to be replaced. Call Service Center.
	5. The Storage tank is full of water. The storage
	tank water level must be lowered below 2/3
	before the water distiller will operate.
	6. Saddle valve is turned off. Turn it on.
B) Water is coming out from	1. Charcoal is old and compacted. Replace
the top of the charcoal filter.	coconut charcoal. See Maintenance section-
	Replacing Charcoal in Charcoal Filter Canister.
	2. Water solenoid valve has malfunctioned and is
	stuck open allowing water to flow from the
	boiling tank to the storage tank before it is
	distilled. Call Service Center.
	3. The boiler fill micro switch requires adjustment
	or is faulty and needs to be replaced. The boiler
	tank overfills and flows into the charcoal filter.
	Call Service Center.
	4. Check to see that boiler tank water level float is floating. If it is not floating properly this could be
	the problem. Call Service Center.
	5. Charcoal filter is more than 2/3 full. There must
	be an air gap between the charcoal and the top
	of the filter. Remove Charcoal filter and make
	sure charcoal filter is only 2/3 full.

PROBLEM	CAUSE
C) Steam or water is escaping from the top of the cooling coil.	 The cooling coil is equipped with a gas release vent, a very small hole in the top of the coil. This is to release certain volatile gases. Steam may escape from this hole. This is normal. If little or no water is being produced the cooling coil may have become disconnected from the boiling tank. Call Service Center.
D) Charcoal Filter is very hot and steam is escaping from the filter.	 The fan switch is turned off. Check Switch. Fan motor is not running properly, may be defective, or the fan motor switch may be defective. Call Service Center. Cooling coil fins are plugged with dust, dirt, or grease. Remove and clean or take to a service center for maintenance. The location of the water distiller does not provide enough airflow for good cooling. Move the water distiller to an area with more air movement.
E) Boiling tank will not fill with water.	 The self-piercing saddle valve is turned off. Check and turn on if necessary. The direct water feed line may be obstructed or kinked. Check and fix. The water switch and/or the power switch are off. Check switches. The float in the boiling tank may be stuck. Check by opening boiler tank and lifting gently up on ball float. Opening for water feed line inside the boiling tank may be scaled up. Check by opening boiler tank and checking scale build up. Manual reset button has tripped. See A) 3. above. Storage tank is over 2/3 full. Normal Operation. Water Fill Micro Switch Faulty. Call Service Center. Solenoid valve is faulty. Call Service Center.
F) Water distiller may start to boil, then shuts off. It may restart after cooling down. Very small amount of water is produced.	Faulty Reset button. After letting water distiller cool down and trying to reset several times, See A) 3 Above. Call Service Center.

PROBLEM	CAUSE
G) Water distiller runs	Improper Heating Element is installed or Heating
properly but little or no	Element is faulty. Call Service Center.
water is produced.	2. Auto drain valve is partially stuck open due to
	scale build up in the valve. Check valve and/or
	flush by pouring water through the top of the
	boiler tank opening.
	3. Auto drain valve is open because it is not
	plugged into the water distiller head. Check and re-connect.
	4. Boiler tank lid is loose. Check by moving Boiler
	Tank Lid Knob.
	5. Reset button may be defective or weak. See A)
	3 above.
	6. Water supply may be restricted. Turn off saddle
	valve. Remove Feed Water line from back of
	water distiller. Place Feed Water line into a pail,
	turn on saddle valve and check water flow.
H) Strange taste in Distilled	1. Boiling tank and/or storage tank may require
Water.	cleaning. See maintenance section on cleaning water distiller.
	2. Boiling tank has over filled, float system or water
	solenoid has failed and allowed un-distilled
	water to overflow into the cooling coil. Open
	boiler tank and check float operation.
	3. Charcoal filter requires new Coconut Charcoal.
	4. Auto-Drain has malfunctioned. Check boiling
	tank for scale build up. See maintenance
	section. 5 Distilled water line may need cleaning. See
	Distilled water line may need cleaning. See maintenance section.
I) Fan does not operate	1. Fan switch is in OFF position. Check Switch.
automatically.	2. Fan motor may be defective. Call Service
acomationiy.	Center.
	3. Storage tank is full and the water distiller has
	shut itself off until the storage tank is only 2/3
	full.

PROBLEM	CAUSE
J) With the Pump Option, there is no water at the faucet.	 Pump plug on the water distiller head is loose. Check plug at rear of water distiller head. Storage tank is empty. Water distiller has quit. See A) above. There is no power to the pump. Check to make sure the pump is plugged into the water distiller head. Check to make sure there is power at the wall outlet. Fuse on the pump box needs replacing. Pump motor failure. Call Service Center. Kinked water line between the pump and the faucet. Check water line for kinks. Pump float microswitch may need replacing. Call Service Center.
K) With Pump Option, pump starts and stops without drawing any water	 Small leak in the water line or faucet. Check water line for leaks. Loose fittings on pump or lines. Check fittings for leaks-with proper wrench. See Pump Kit Installation Section. Check-valve in pump may be stuck open. Call service center.
L) Water distiller does not operate and storage tank is empty.	 Pump float assembly may be stuck or microswitch failed, call Service Center. Control Cable is not connected. Check connection between water distiller head and storage tank. Check to make sure there is power at the wall outlet. Make sure all control switches are on.
(M) Storage tank only fills 2/3 full and will not fill to the top.	 Storage tank float assembly and/or pump Microswitch has failed. Call Service Center.
(N) Distiller does not seem to produce as much water as specified.	See Section in Guide: 10 Factors That Will Affect Your Water Distiller Production.

Contact any Precision Water System Service Center to correct any problems with your water distiller that are not covered in this guide.

To locate a Service Center in your area contact the manufacturer at:

Precision Design & Manufacturing Inc. 9020-100 Street, Westlock, Alberta, Canada T7P 2L4

Website: www.precisionwatersystems.ca

e-mail: info@precisioncanada.com

Phone: (780) 349-4933

Optional Accessories

PWS APK-21 Pump Kit

The PWS APK-21 Pump Kit allows the convenience of having distilled water at your kitchen and includes a pantry faucet. The pump also allows you to connect other appliances that would benefit from distilled water like ice makers, water dispensers, humidifiers etc. The PWS APK-21 Pump Kit attaches to a wall near your distiller.

Your Optional pump kit has been shipped in one box. The diagram below shows all the parts that will be in the pump kit box.

a) 1 – Faucet #080052



b) 1 – Pump Assembly #510233



c) Instruction Sheet



d) 2 – ½" Nut/ Cone/Ring Set #034003




e) 25' – ½" Plastic Water Line #052001



f) 4' – 3/8" Plastic Water Line #052007



g) 8 – ½" Line Clip Plastic #054006





i) 4 – #10 x 1 Screws #010008



j) 1 – 3/8" Nut/ Cone/Ring Set #034004




Check List

List		Part No.	Description
	(A)	080052	1 – Pantry Faucet (2 pieces)
	(B)	510233	1 - Pump Assembly
	(C)	097514	1 - PWS APK-21 Instruction Sheet
	(D)	034003	2 - ½" Nut/Cone/Ring Set
	(E)	052001	25' - 1/2" OD Plastic Water Line
	(F)	052007	4' - 3/8" x 1/4" LDPE tubing
	(G)	054006	8 – ½" Plastic Wall Mount Line Clips
	(H)	010000	8 - #10 x 1/2" SS Screw
	(I)	010008	4 - #10 x 1" Wood Screws
	(J)	034004	1 – 3/8" Nut/Cone/Ring Set


PWS APK-21 Pump Kit Installation

TOOLS REQUIRED: For PWS APK-21 Pump Kit Installation

- (A) Basin Wrench
- **(B)** #2 Robertson Screwdriver
- (C) 10" Adjustable Wrench
- **(D)** 3/8" Drill
- (E) 3/8" Nut Driver or
- (F) Pliers or
- (G) Ratchet with 3/8" socket
- (H) Utility Knife
- (I) 5/8" Wood Bit (minimum length of 8")
- (J) 7/8" Hole saw for sink

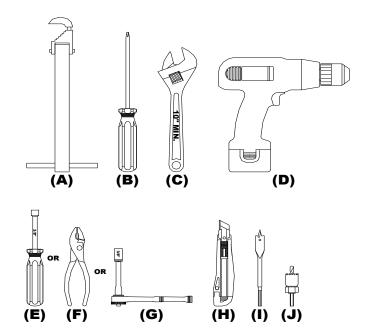


- 1. Remove all loose pieces from the pump kit box and save all packaging until all the parts are identified and located. If any parts are missing or if you feel you have been given the wrong part, DO NOT return the pump kit. Contact your dealer for the required parts. They will be pleased to assist you.
- 2. Disconnect the electrical cord. Make sure the storage tank is empty.

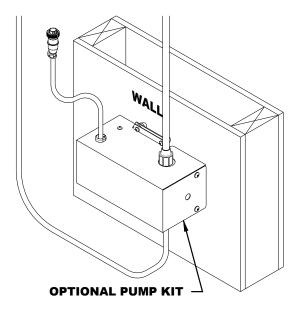


Pump Wall Mounting Diagram

Automatic Pump Mounting Diagram

- **3.** Find a good backing wall and screw the existing holes on the pump box through the pump and into the wall with the four 1" wood screws provided, making sure the pump cord can reach to the distiller pump receptacle on the distiller.
- **4.** See **Bulkhead Stem Plug Removal Diagram** below. Remove the locking clip from the 3/8" bulkhead on the back of the storage tank by pulling on the tab. Remove the 3/8" stem plug from the bulkhead by pushing the dark grey collet against the bulkhead and pulling out on the stem plug with the other hand (keep plug for future use).

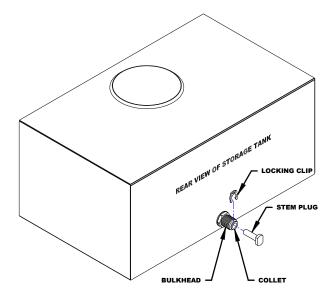


- **5.** Insert one end of the 4' piece of the 3/8"OD Plastic Tubing into the fitting at the rear of the distiller storage tank. Slide a 3/8" Nut/Cone/Ring set on to the other end of the 3/8"OD Tubing and connect to the pump inlet side.
- **6.** Insert one end of the 4' piece of 3/8" Plastic Tubing into the fitting at the rear of the distiller storage tank. Slide a 3/8" Nut/Cone/Ring set onto the other end of the 3/8" Tubing and connect to the pump inlet side.
- **7.** Slide the ½" Nut/Cone/Ring onto one end of the ½"OD Tubing. You are now ready to install your faucet.
- **8.** To install your faucet, you will require to drill a 7/8" hole in the sink. Drill a 9/16" or 5/8" hole through the counter, sub floor and floor to accommodate the water line.

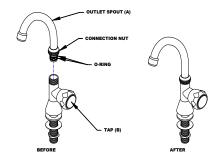

- 9. See Pantry Faucet Assembly Diagram above. Connect the two pieces of the pantry faucet by first wetting the O rings on the outlet spout (A) with water or dish soap. Be careful not to damage the O rings when inserting. Slowly rock the spout as you push it into the tap section (B). Use a cloth wrapped around the nut first to prevent damage to the nut when tightening. Turn the nut on the spout with pliers so that it is snug. Do not over tighten. The O rings will provide the seal for the water. The spout can be swivelled for convenience after installation is complete.
- **10.**Install the faucet gasket on the faucet threads and insert the pantry faucet threaded base through the 7/8" hole in the sink. Secure the faucet to the sink with the faucet nut. Tighten with a basin wrench or pliers.
- 11. Route the ½" OD water tube from the water distiller pump to the sink faucet. When routing the water line, consider other possible distilled water uses along the route. The **Typical Household Plan for Water Distiller Set up Diagram** above shows a typical household plan for water distiller set up to a furnace humidifier, fridge cold water and/or icemaker and a kitchen sink faucet.
- **12.**Once the storage tank is approximately ½ full, connect the 4-Pin circular plug from the pump into the receptacle labelled 'Accessory Pump' on the bottom of the water distiller head. The water level switch in the storage tank will automatically turn the pump switch on as soon as it is plugged in and the pump will pressurize your water line. When this happens, check for leaks.
- **13.**To enjoy water at the pantry faucet, lift the lever. The pump will start and stop as required to keep distilled water flowing at the faucet.
- **14.**It is a good idea to pour approximately 2-3 gallons of distilled water into your storage tank after you install the pump to check the fitting for leaks. However, if you do not have any water available, let the distiller run. As it fills the storage tank, the water will automatically turn the pump switch on and the pump will pressurize your water line, check for leaks at this time.
- **15.**Once the storage tank is approximately ½ full, connect the 4-Pin circular plug from the pump into the receptacle labelled 'Accessory Pump' on the bottom of the water distiller head. The water level switch in the storage tank will automatically turn the pump switch on as soon as it is plugged in and the pump will pressurize your water line. When this happens, check for leaks.

NOTE: Keep pump unplugged until you are available to check for leaks upon initial installation


Control Cable Connection Diagram

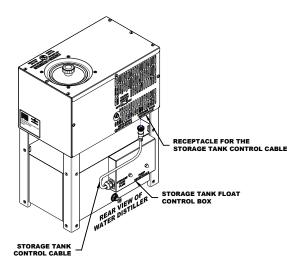


Faucet and Water Line Installation for PWS APK-21

- 1. Now you are ready to attach the pantry faucet to the sink. The kitchen sink is the most desirable location for the faucet as it is close to the cooking area. To install the faucet, you will need to drill a 7/8" hole in the sink and counter where you want the faucet. Drill a 5/8" hole through the sub floor of the cupboards and floor to accommodate the water tubing.
- 2. Install the faucet gasket on the faucet threads and insert the pantry faucet threaded base through the 7/8" hole in the sink. Secure the faucet to the sink with the faucet nut. Tighten with a basin wrench or pliers.
- **3.** Attach ½" OD water tube to the pump outlet elbow with a ½" Nut/Cone/Ring. Tighten with a 10" adjustable wrench or basin wrench.

Typical Household Plan for Water Distiller Set up Diagram

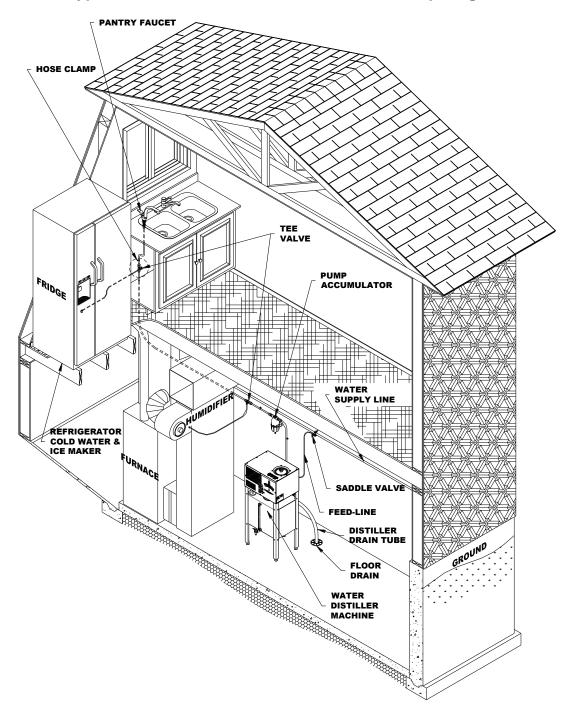

- 1. Route the ½" OD water tube from the water distiller pump to the sink faucet. When routing the water line, consider other possible distilled water uses along the route. The **Typical Household Plan for Water Distiller Set up Diagram** above shows a typical household plan for water distiller set up to a furnace humidifier, fridge cold water and/or icemaker and a kitchen sink faucet.
- **2.** Attach the ½" OD water line to the faucet with a ½" Nut/Cone/Ring. Tighten with a 10" adjustable wrench or basin wrench. Use caution not to over-tighten. Secure the water line using ½" wall mount line clips and #10 x 1/2" screws.

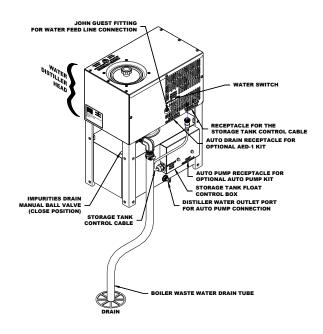

Electrical Connections-Rear View Diagram

- 3. If the Automatic Electric Drain option is installed on your water distiller, see the Electrical Connection-Rear View Diagram above. Reconnect the four-pin circular plug from the Automatic Drain Kit into the receptacle labelled 'Auto Drain Receptacle' on the bottom of the water distiller head. If the Automatic Electric Drain option is not installed on your distiller, close the manual drain valve. Connect the wall stabilizer clamp. Connect the feed water line and turn the feed water line saddle valve on. Plug the electrical cord into the wall outlet.
- **4.** It is a good idea to fill your storage tank approximately ½ full with distilled water after you install the pump to check the fittings for leaks. If you do not have any distilled water available, let the water distiller run.

NOTE: Keep pump unplugged until you are available to check for leaks upon initial installation

- **5.** Once the storage tank is approximately ½ full, connect the four-pin circular plug from the pump into the receptacle labelled 'Pump Receptable' located on the storage tank float control box. The water level switch in the storage tank will automatically turn the pump switch on as soon as it is plugged in and the pump will pressurize your water line. When this happens, check for leaks.
- **6.** To enjoy water at the pantry faucet, lift the lever. The pump will start and stop as required to keep distilled water flowing at the faucet.

PWS AED-1 Automatic Electric Drain Kit Installation


TOOLS REQUIRED:

- (A) 12" Adjustable Wrench
- (B) 10" Adjustable Wrench
- (C) Slotted Screwdriver



Introduction: The PWS AED-1 Automatic Electric Drain Kit is designed to drain the water distiller boiling tank of impurities automatically, so that you don't have to. Every time you distil water and your storage tank fills up, the water distiller will shut off and the Automatic Electric Drain Option will open and drain the boiling tank of all soluble impurities. The boiler will remain empty until the water distiller restarts, then the drain valve will automatically close and let your water distiller boiling tank refill with fresh water and begin the distillation cycle again.

Your Optional PWS AED-1 kit has been shipped in one box. The Diagram below shows all of the parts that will be in the PWS AED-1 box.

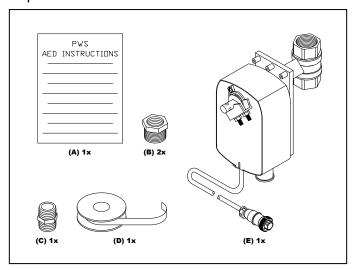

PWS-AED-1 Box Components Diagram
PWS AED-1 Box Check Off List

Check


Dort No

LISI	Pail NO.	
□ (A)	097011	1- Instruction Sheet
□ (B)	030031	2- Reducer, 1"MPT x ¾"FPT
□ (C)	030017	1- 3/4" MPT Close Nipple
□ (D)	080109	1- Roll Teflon Tape
□ (E)	500448	1- PWS AED Motor, Ball Valve, 120V

Remove all loose pieces from the automatic electric drain kit box and save all packaging until all the parts are identified and located. If any parts are missing or if you feel you have been given the wrong part, DO NOT return the automatic electric drain kit. Contact your dealer for the required parts. They will be pleased to assist you.


Installation

- 1. If the water distiller has been used without the PWS Automatic Electric Drain, turn off the water distiller, drain the boiling tank and wait for the water distiller to cool off.
- 2. Disconnect the electrical cord and unscrew the Control Cable plug counterclockwise. Turn off the feed water line saddle valve, and disconnect the feed water line.

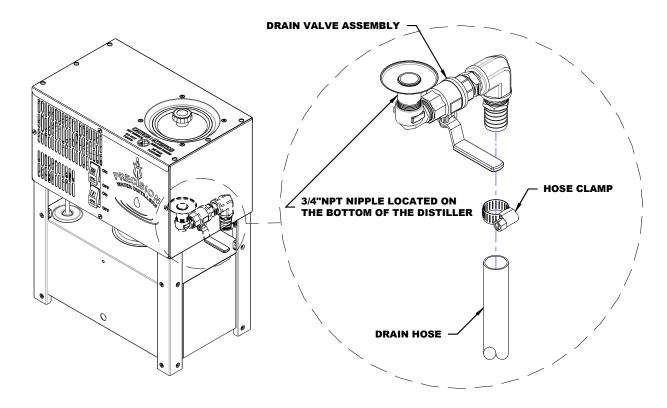

Drain Tube Removal Diagram

- **4.** Refer to the **Drain Tube Removal Diagram** above. Remove the gear clamp and drain hose from the barbed coupler on the rear of the water distiller head.
- **5.** Remove the water distiller head from the charcoal filter canister and storage tank by removing the screws on the bottom of the distiller head holding the storage tank legs and lift the distiller head up.
- **6.** Turn your water distiller head upside down.
- **7.** Remove the drain elbow assembly and ball valve assembly using a 12" adjustable wrench. Save this to reinstall as part of the PWS AED-1.

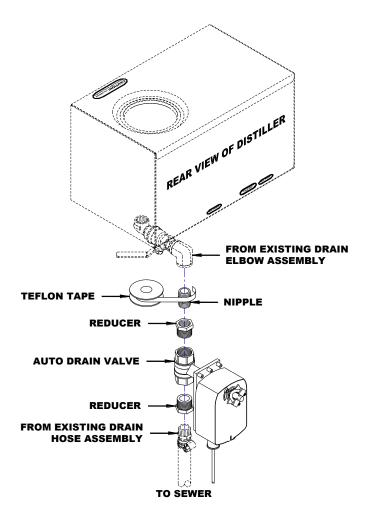

PWS AED-1 Plumbing Diagram

- **8.** Refer to the **PWS AED-1 Plumbing Diagram** above. Use Teflon tape on all fittings to seal threads. Thread the Valve Body to the existing drain elbow. An arrow on the valve indicates the direction of flow. Flow is from the water distiller head down to the floor drain.
- **9.** Remove the hose barb connector on the end of the drain line.
- **9.** Install the motorized ball valve assembly with all included fittings as shown in the diagram above.
- **10.** Tighten using a backup wrench to ensure the tank fitting does not bend.
- 11. After checking that all fittings are tight, return the water distiller head to the upright position and reinstall on the charcoal filter canister and storage tank. Reconnect the control cable plug on the storage tank to the control cable receptacle on the bottom of the water distiller head by turning the plug until the splines lock and then turn the locking ring until finger tight.

- **12.** Attach the drain hose to the barbed coupler secure with a gear clamp using a slotted screwdriver. Connect the wall stabilizer clamp. Run the drain hose to a suitable floor drain. The drain hose must have an air gap between the end of the hose and the floor drain. The air gap is necessary so that water cannot be siphoned up the drain hose into the boiling chamber and also so that sewage gases do not rise up the drain hose and contaminate the water distiller.
- 13. Connect the feed water line and turn the feed water line saddle valve on.
- **14.**Connect the four-pin circular plug from the motorized drain valve into the receptacle labelled 'Auto Drain Receptable' on the bottom of the water distiller head.
- **15.**Plug the electrical cord of the distiller into the wall outlet. Leave the ball valve in the open position during normal operation. The distiller is now ready to operate and drain the boiling tank automatically.

NOTE: With the automatic drain kit installed the ball valve is always left open while the water distiller is operating. When the water distiller is shut down for cleaning, the ball valve needs to be closed so the cleaning solution in the boiler tank will not drain out. This procedure is described in more detail in the maintenance section of the guide.

Additional Supplies

Pressure Accumulator #080059



Used to help maintain pressure on the outlet side of the optional pump and prevent the pump from starting every time a small amount of water is required at the faucet, fridge or humidifier.

Water Distiller Cleaner and Descaler 600 g #500102 & 1600 g #500103





Used for regular maintenance to clean the scale out of the boiling tank. Dissolves water minerals in water distillers, coffeepots, dishwashers or most metal products where water scale is a problem.


Pure Activated Coconut Charcoal 250g #500106 & 600g #500107





Contains 100% pure crushed coconut shells that have been steam activated at extremely high temperatures creating a porous grade of activated charcoal. This coconut charcoal can be used along with any type of home or commercial water distiller. Coconut charcoal is used to trap any gases or obnoxious odors that may escape the distillation process. Do not use any other charcoal such as aquarium type.

Inline Sediment Filter & Bracket Filter #080054 Bracket #054073





Inline Sediment filter to be used between the saddle valve and your water distiller, on the ½" Feedline. Must be replaced when water flow is restricted due to particles that build up in the filter from the raw water supply.

All Options are available from your Precision Water Systems Dealer or Service Center

Specifications and Technical Information

Model	PWS River
Electrical Specifications	
Voltage	120VAC
Amperage	11.7 Amps
Power	1100 Watts
Frequency	60 Hertz
Water distiller Physical Size	
Height-w/ lid	24.5" (62.2 cm)
-w/o lid	23.5" (59.7cm)
Width	17-1/2" (44.5 cm)
Depth-w/ SG & Drain	16" (40.6 cm)
-w/o SG & Drain	10-3/4" (27.3cm)
Water distiller Weight	
Dry: Water distiller and Tank Only	42 lbs. (19.1 kg.)
Water distiller Production Canacity	
Water distiller Production Capacity	0.22.110 ==1/h (4.0.1 /h)*
Approx. Prod. Capacity	0.33 US gal/h (1.9 L/h)*
Approx. Daily Prod. Capacity	8 US gal/24 hrs.
Storage Tank Capacity	
Total Storage Capacity	5.7 US gal (21.6 L)
Useable Storage Capacity	5.2 US gal (19.7 L)


^{*}Note: Performance based on optimum conditions including water temperature, ambient temperature, line voltage, boiling tank cleanliness, boiler fill level, etc

Wiring List - River Distiller - 125V PART # 510227B

SERIES 1

No.	Part#	Color	Ga	Length	From Conn.	To Conn.	From Location	To Location
1	500550	MIDDLE	14	3"	#10RING #14- #16	POWER CORD MIDDLE WIRE POWER CORD	GROUND	POWER CORD MIDDLE WIRE
2	500550	SMOOTH	14	16"	F250 #14-#16	SMOOTH WIRE POWER CORD RIBBED	POWER SWITCH #2	POWER CORD SMOOTH WIRE
3	500550	RIBBED	14	17"	#10RING #14- #16	WIRE	RESET SWITCH #4	POWER CORD RIBBED WIRE
4	510122	BLK	18	12"	PIGG #18-#22	FAN MOTOR	HEATER RELAY #1	FAN MOTOR
5	510122	BLK	18	13"	F250 #18-#22	FAN MOTOR	FAN SWITCH #2	FAN MOTOR
6	095265	BLK	16	20"	F250 #14-#16	PIGG #14-#16	WATER SWITCH #2	FAN SWITCH #3
7	095275	YLW	16	13"	F187 #14-#16	F250 #14-#16	LOWER BOILER MICRO NC	HEATER RELAY #6
8	095276	ORG	16	20"	F187 #14-#16	F250 #14-#16	UPPER BOILER MICRO NC	WATER SWITCH #1
9	095277	BLK	16	5"	#10RING #14- #16	F187 #14-#16	RESET SWITCH #1	LOWER BOILER MICRO COM
10	095266	BLU	16	19"	PIGG #14-#16	F250 #14-#16	HEATER RELAY "B"	SOLENOID VALVE A
11	095278	BLK	16	20"	F187 #14-#16	F250 #14-#16	UPPER BOILER MICRO COM	SOLENOID VALVE B
12	095267	BLK	16	19"	PIGG #14-#16	FPIN	POWER SWITCH #2	STORAGE TANK RECEPTACLE #4
13	095272	ORG	16	20"	F250 #14-#16	FPIN	POWER SWITCH #8	STORAGE TANK RECEPTACLE #1
14	095273	BLU	16	22"	F250 #14-#16	FPIN	HEATER RELAY #3	STORAGE TANK RECEPTACLE #2 STORAGE TANK
15	095268	YLW	16	10"	PIGG #14-#16	FPIN	SOLENOID VALVE A	RECEPTACLE #3
16	095279	RED	16	10"	F250 #14-#16	#10RING #14-#16	POWER SWITCH #3	RESET SWITCH #2
17	095274	WHT	16	17	F250 #14-#16	FPIN	HEATER RELAY #4	DRAIN RECEPTACLE #3
18	095269	BLK	16	15"	PIGG #14-#16	FPIN	FAN SWITCH #3	DRAIN RECEPTACLE #2
19	095007	WHT	16	4"	#10RING #14- #16	#10RING #14-#16	RESET SWITCH #1	HEATING ELEMENT "A"
20	095280	YLW	16	12"	F250 #14-#16	#10RING #14-#16	HEATER RELAY #1	HEATING ELEMENT "B"
21	095063	GRN	16	4"	#10RING #14- #16	FPIN	GROUND	STORAGE TANK RECEPTACLE #7
22	095063	GRN	16	4"	#10RING #14- #16	FPIN	GROUND	DRAIN RECEPTACLE #4
23	095010	WHT	16	3"	PIGG#14-#16	F250 #14-#16	HEATER RELAY #4	HEATER RELAY #5
24	095281	BRN	16	11"	F250 #14-#16	#10RING #14-#16	HEATER RELAY #2	RESET SWITCH #3
25	095282	ORG	16	11"	F250 #14-#16	#10RING #14-#16	FAN SWITCH #3	HEATING ELEMENT "A"
26	095283	RED	16	11"	#10RING #14- #16	F250 #14-#16	HEATING ELEMENT "B"	POWER SWITCH #7
27	095010	WHT	16	3"	F250 #14-#16	PIGG #14-#16	FAN SWITCH #6	POWER SWITCH #7
28	095010	WHT	16	3"	F250 #14-#16	PIGG #14-#16	FAN SWITCH #7	FAN SWITCH #2
29	095270	WHT	16	7"	PIGG #14-#16	PIGG #14-#16	FAN SWITCH #8	HEATER RELAY #2
30	095271	WHT	16	5"	F250 #14-#16	PIGG #14-#16	POWER SWITCH #8	FAN SWITCH #8
31	095010	WHT	16	3"	F250 #14-#16	PIGG #14-#16	POWER SWITCH #6	POWER SWITCH #3
						STORAGE TAN	IK .	
32	510226	RED	16	7"	PIGG F187 #14-#16	MPIN	UPPER LEVEL SHUTOFF MICRO COM	HOLDING TANK PLUG #1
							LOW LEVEL START MICRO	LOW LEVEL PUMP MICRO
33	095250	ORG	16	5"	F187 #14-#16 PIGG F187	F187 #14-#16	COM LOW LEVEL START MICRO	COM UPPER LEVEL SHUTOFF
34	095249	BLK	16	5"	#14-#16	F187 #14-#16	COM	MICRO COM
35	510226	WHT	16	7"	FPIN	MPIN	STORAGE TANK PLUG #4	PUMP RECEPTACLE #2
36	095248	RED	16	5"	F187 #14-#16	FPIN	LOW LEVEL PUMP MICRO NO LOW LEVEL START MICRO	PUMP RECEPTACLE #3
37	510226	BRN	16	7"	F187 #14-#16	MPIN	NO UPPER LEVEL SHUTOFF	STORAGE TANK PLUG #3
38	510226	BLK	16	7"	F187 #14-#16	MPIN	MICRO NC	STORAGE TANK PLUG #2
39	095247	GRN	16	5"	FPIN	1/4"RING #14-#16	PUMP RECEPTACLE #4	GROUND
40	510226	GRN	16	7"	MPIN	1/4"RING #14-#16	STORAGE TANK PLUG #7	GROUND

WIRING DIAGRAM – PWS RIVER DISTILLER

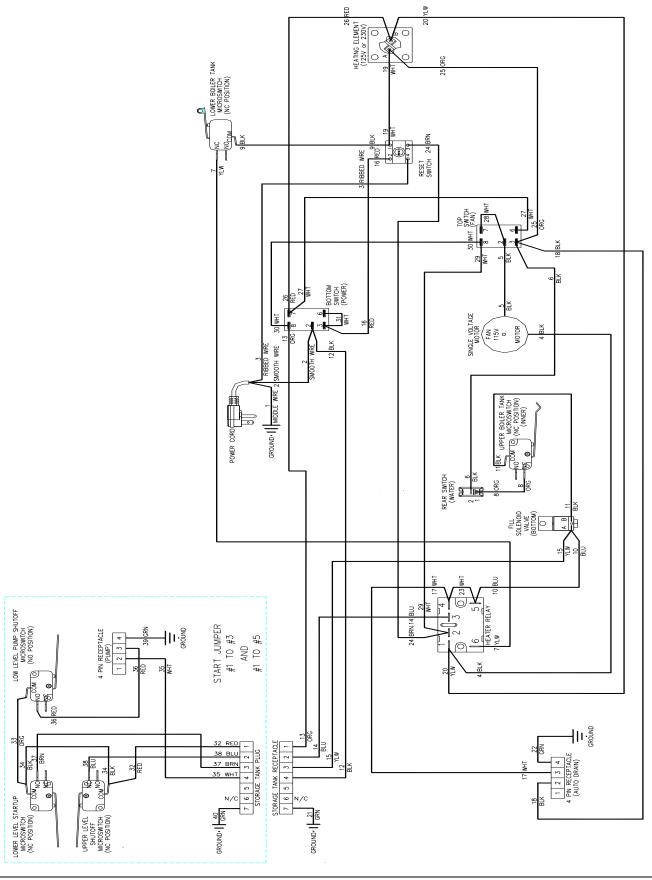

Index

Boiling Tank Lid, 25	schedule, 41
Capacities	Manual Fill Operation, 29
distilled production, 59	Operation, 26
storage tank, 59	fan switch, 27
Charcoal	normal, 30
changing, 34	overheat reset switch, 27
Charcoal Filter	power switch, 27
installing Canister, 34	storage tank drain valve, 28
replacing charcoal, 34	water switch, 27
Cleaning	Options
boiling tank using the cleaner descaler, 32	charcoal filter assembly, 34
boiling tank using white vinegar, 34	charcoal-replacement order, 58
regular inspection and cleaning of the boiling tank, 31	cleaner and descaler-replacement order, 58
Control Cable, Connection, 17, 24	filter, inline, sediment replacement order, 58
Descaler	pressure accumulator, 58
instructions, 32	pump kit installation, 48
Drain tube, 20	PWS AED-1 automatic electric drain kit, 54
Electrical	PWS APK-21 pump kit, 48
location, 14	Production
requirements, 14	water, 11
Electrical Connections	Record of purchase, 5
water distiller head, 53	Safety Precautions, 7
Feed Water Line Connection, 21	Schematics
Fuse Replacement, 28	River, 61
Household Plan for Water Distiller Set Up, 52	Service Center Locator, 46
Hydrological Cycle, 13	Startup-Summary, 8
Introduction, 4	Sterilization, 36
Inspection-boiling tank, 31	liquid-storage tank, pump and water lines, 36
Installation	steam-water distiller head, 37
drain tube, 20	steam-water distiller head, filter canister and storage
feed water line, 21	tank, 38
PWS AED-1 automatic electric drain kit, 54	Storage Tank Assembly, 17
PWS APK-21 pump kit, 48	Strainer Removal-boiling tank, 32
sight gauge and valve, 18	Terminology, 9
water distiller tools, 16	Troubleshooting, 43
Lid	Unpacking, 15
boiling tank, 25	Warranty, 6
storage tank, 25	Precision Water Distiller, 5
Location-suitable distiller, 14	Weights, 59
Maintenance and Cleaning, 31	Wiring List
record table, 41	River, 60

